
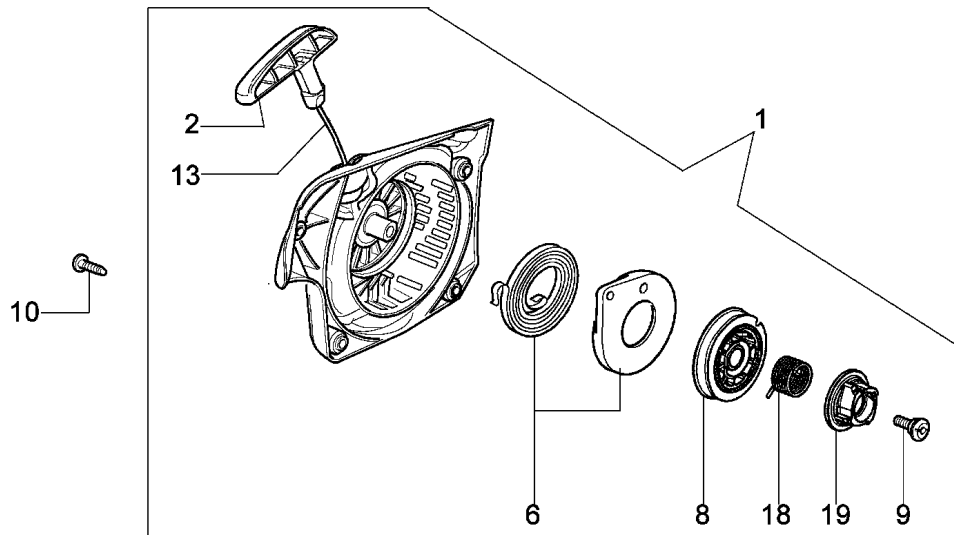
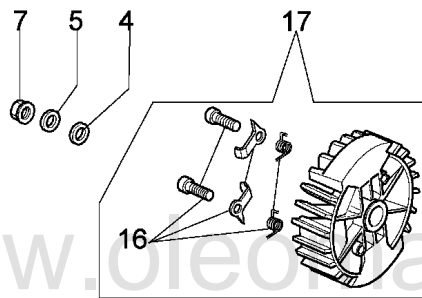


Drawing Engine

Reference	Qty	Item number	Description
1	1	50170010R	Manifold
2	1	094600103	Band
3	1	3055101	Spark plug
4	1	50170186R	Gasket
5	1	50170189R	Muffler
6	3	3860117R	Screw
7	2	004000015R	Piston ring d.40
8	1	50110047R	Piston pin
9	2	004900061R	Ring
10	1	50120034	Piston assy
11	1	50172021	Complete cylinder
12	2	50110043R	Spacer
13	1	50110044R	Bearing
14	1	3050022R	Seal ring
15	1	094000006R	Bearing
16	1	3050024R	Seal ring
17	1	50050016R	Cover
18	4	3801047	Screw
19	1	50110045R	Crankshaft

www.oleomac.hu

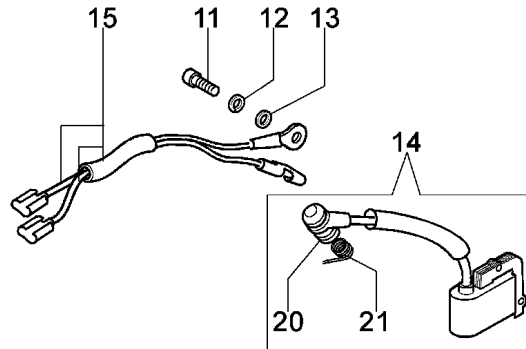


Drawing Starter assy

Reference	Qty	Item number	Description
1	1	50172004R	Starter assy
2	1	50170017R	Starter handle
3	1	50070123R	Starter rope
4	1	005000361	Washer
5	1	3833080	Washer
6	1	50050073R	Spring
7	1	004000142	Nut
8	1	50170153R	Starter pulley
9	1	50160024	Screw
10	4	3960115R	Screw
11	2	3960075	Screw
12	2	006000315	Washer
13	2	3916004	Washer
14	1	50170144BR	Ignition coil
15	1	50170090R	Cable
16	1	50072029	Pawl
17	1	50170015R	Flywheel
18	1	50170154R	Spring
19	1	50170155R	Insert
20	1	50050126	Spark plug cap
21	1	50050127	Spring

www.oleomac.hu


Drawing Crankcase

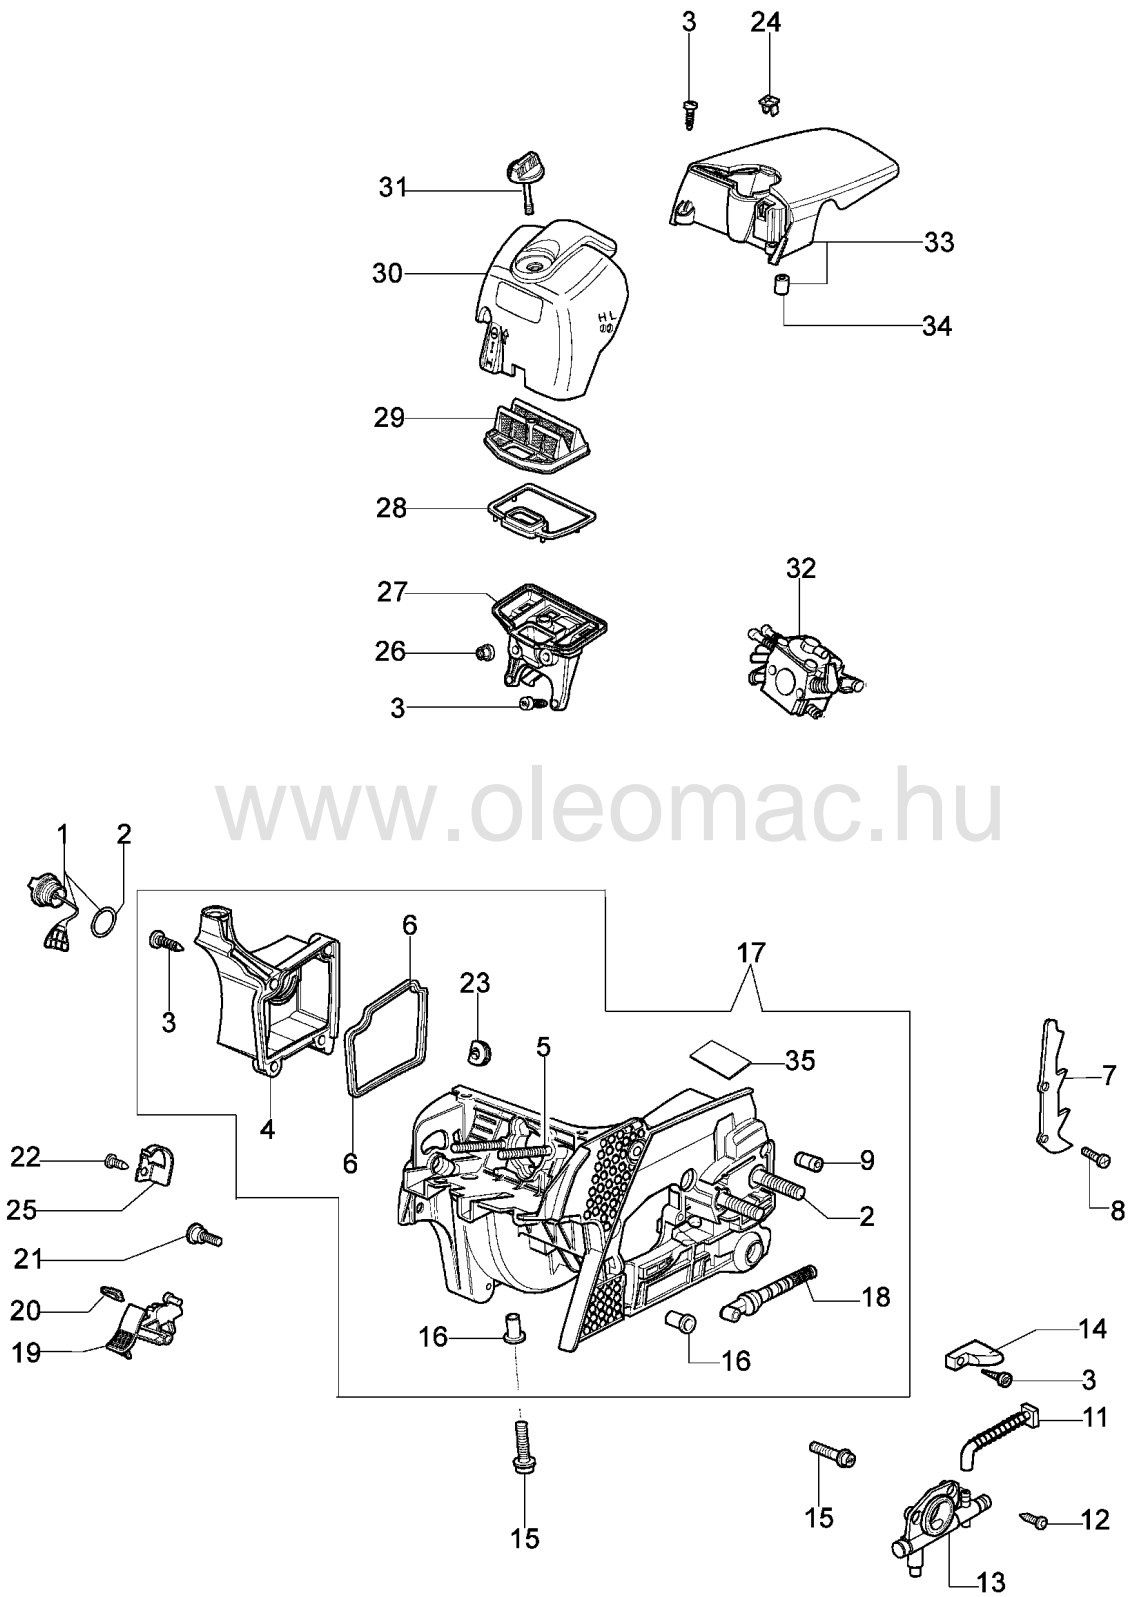

Drawing Crankcase

Reference	Qty	Item number	Description
1	1	50052005R	Tank cap
2	1	3049025	O-ring
3	11	3960115R	Screw
4	1	50170009R	Cover
5	5	50070067A	Rod
6	1	50170004R	Gasket
7	1	50170042R	Spike
8	2	3960099R	Screw
9	1	097000229R	Breather valve
10	2	50050052	Stud
11	1	50050049R	Hose
12	3	3960074	Screw
13	1	50170051AR	Oil pump
14	1	094600369R	Guard
15	5	3860097	Screw
16	5	50050067	Spacer
17	1	50172008R	Crankcase assy
18	1	50170149R	Oil filter
19	1	50170060AR	Lever
20	1	50170062R	Plate
21	1	50160024	Screw
22	1	3960070	Screw
23	1	005000347A	Grommet
24	1	50170032R	Deflector
25	1	50170061R	Spring
26	2	3933100R	Nut
27	1	50170132R	Support
28	1	50050056BR	Gasket
29	1	50170036R	Air filter
30	1	50170037AR	Cover
31	1	50110007R	Knob
32	1	2318755CR	Carburetor WT-780B
33	1	50172019R	Cover
34	1	50070126R	Spacer
35	1	50170033R	Guard

Drawing Fuel tank-handle

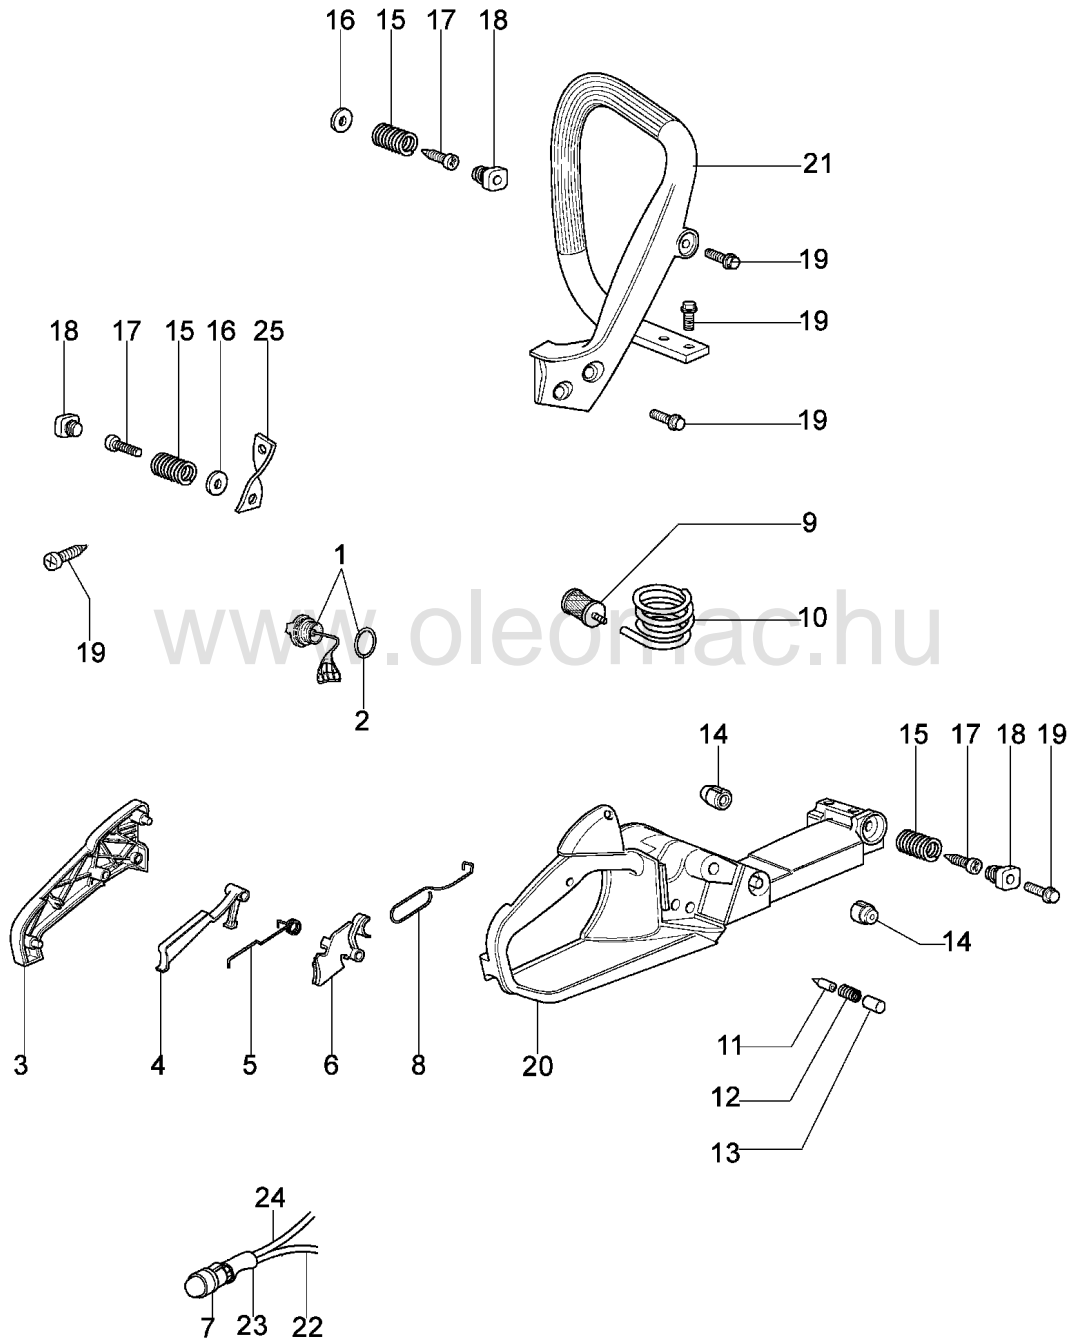

Drawing Fuel tank-handle


Reference	Qty	Item number	Description
1	1	50052005R	Tank cap
2	1	3049025	O-ring
3	1	50170024R	Cover
4	1	50050046AR	Lever
5	1	097000028R	Spring
6	1	50170045R	Throttle lever
7	1	50060012	Air purge
8	1	50170012R	Throttle rod
9	1	094600450R	Fuel filter
10	1	50170152R	Hose
11	1	094500577A	Valve
12	1	094500575R	Spring
13	1	50050071	Breather valve
14	3	50010061R	AV-mount
15	3	50050047AR	Spring
16	1	3918010R	Washer
17	3	3960115R	Screw
18	3	50170034R	Support
19	7	3960099R	Screw
20	1	50172007R	Tank
21	1	50170026R	Handle
22	1	50170224R	Hose
23	1	50170121R	Sheath
24	1	50060014R	Hose
25	1	50050123R	Strap

www.geomac.hu

Drawing Clutch-brake



Reference	Qty	Item number	Description
1	1	50170039R	Chain cover cpl.
2	1	50170040R	Guard
3	1	095000219R	Spring
4	1	50010088AR	Spring
5	2	3960070	Screw
6	1	50050125R	Plate
7	1	50050039	Brake band
8	1	097000146	Lever
9	1	50050064	Pin
10	1	004000352	Washer
11	2	50010148R	Nut
12	1	094500029	Spring
13	1	094000129AR	Clutch
14	1	50060033A	Clutch drum .325
15	1	004400285	Washer
16	1	50060008R	Worm gear .325
17	1	50030372	Bearing
18	1	50162017A	Chain tensioner kit
19	1	50170044R	Cover

www.oleomac.hu

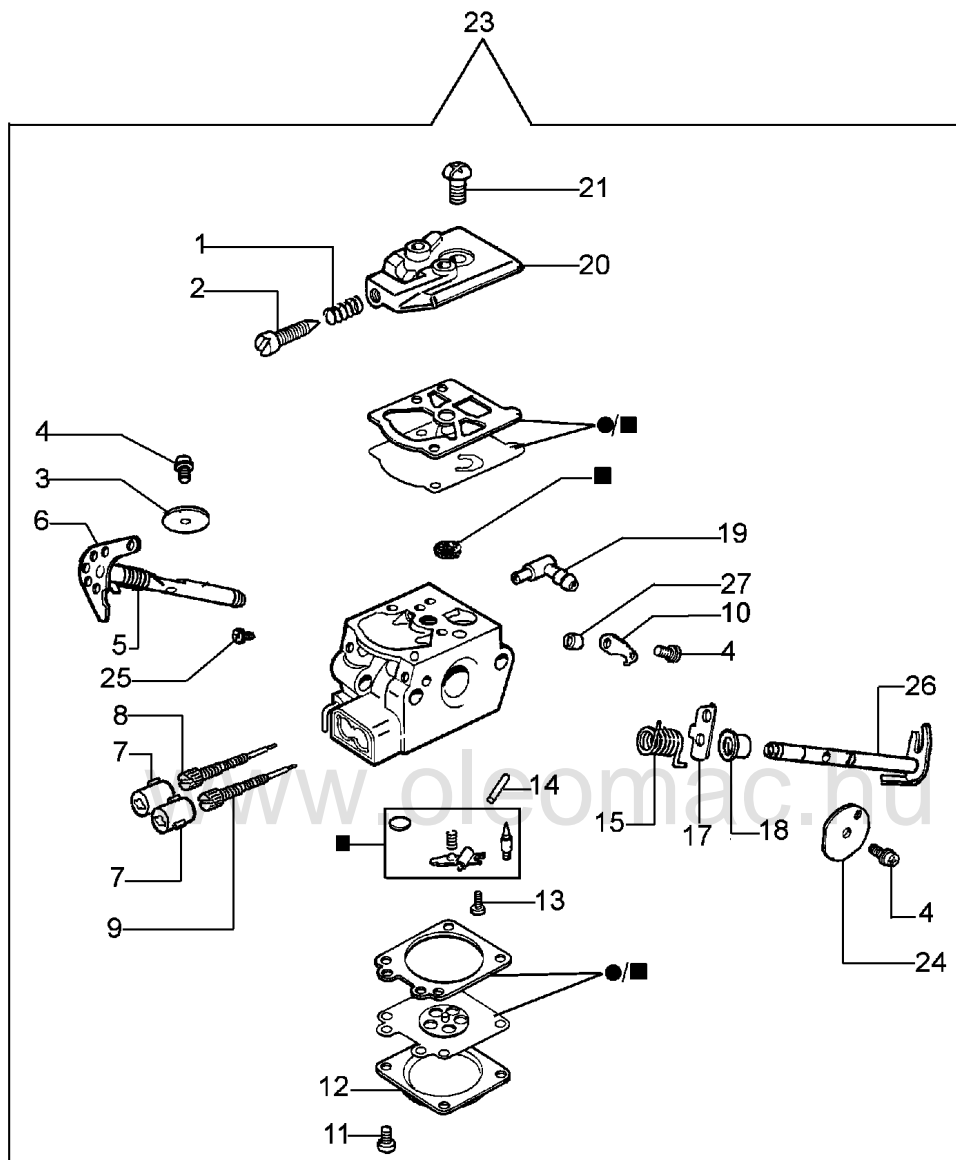

16 ■ KIT RIPARAZIONE
REPAIR KIT

22 ● KIT MEMBRANE & GUARNIZIONI
DIAPHRAGM & GASKET SET

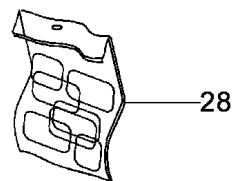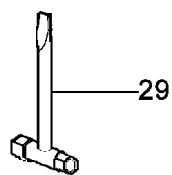

Drawing Carburetor WT-780B

Reference	Qty	Item number	Description
1	1	094600148	Spring
2	1	074000240	Adjust.screw
3	1	095000141	Shutter
4	3	50010141	Screw
5	1	094600208	Spring
6	1	2318757	Shaft
7	2	2318867	Cap
8	1	2318837	Screw L
9	1	2318893	Adjust. screw
10	1	50050108	Throttle lever
11	4	035000162	Screw
12	1	2318191	Cover
13	1	003300202	Screw
14	1	003300201	Spindle
15	1	50050115	Spring
16	1	094600209	Repair kit
17	1	50050111	Lever
18	1	50050109	Bushing
19	1	50050160	Fitting
20	1	50050107	Cover
21	1	003300197	Screw
22	1	094600210	Kit guarn
23	1	2318755AR	Carburetor WT-780B
24	1	094600140	Shutter
25	1	50050117	Screw
26	1	2318758	Shaft
27	1	50050110	Bushing
28	1	50172030	Labels kit
29	1	2304073	Wrench 13x19